

WARNING HEAVY DUTY AIR LIFTER SAFETY

Any piece of equipment can be dangerous if not operated properly. **YOU** are responsible for the safe operation of this equipment. The operator must carefully read and follow any warnings, safety signs and instructions provided with or located on the equipment. Do not remove, defeat, deface or render inoperable any of the safety devices or warnings on this equipment. **IF** any safety devices or warnings have been removed, defeated, defaced or rendered inoperable, **DO NOT USE THIS EQUIPMENT!!!**



WARNING: This product can expose you to chemicals including Bisphenol A (BPA) which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65warnings.ca.gov

IMPORTANT SAFETY RULES TO FOLLOW

DANGER: THIS EQUIPMENT HAS AND CREATES MULTIPLE PINCH POINTS THAT CAN CAUSE DISMEMBERMENT OR DEATH! KEEP HANDS, FEET AND ALL OTHER BODY PARTS CLEAR AT ALL TIMES.

The following pages contain the specific safety and operating instructions and procedures for the care and use of this Crain model # 280 Heavy Duty Air Lifter for appliance moving.

For your safety, and the safety of others, as well as to minimize the potential for property damage you must read and understand all of the following information.

This Air Lifter moves heavy appliances (up to 800 lbs.) by generating high pressure jets of air through its perforated rubber load plates. Slide the load plates under the load, turn on the blower, and the air plates inflate to lift the load. The air jets beneath create a cushion of air that glides the load over hard surfaces like vinyl or hardwood without scratching. Comes with a set of four smooth polypropylene pads for moving the load plates over carpet. Saves time and reduces the risk of damaging new floors as well as injuries!

Includes: (2) air plates, (1) 2 horsepower blower with shoulder strap, (1) T-connector, (3) hoses, (4) carpet pads, and (2) carrying bags. Volts: 120VAC Amps: 7.5 Net weight: 30 lbs.

If the person receiving this handout will not be the user of the equipment, forward these instructions to the operator. **IF** there is any doubt as to the operation or safety of the equipment, **DO NOT USE!!! CALL A TOOL SHED IMMEDIATELY!!! FAILURE TO FOLLOW THESE INSTRUCTIONS COULD RESULT IN INJURY OR DEATH**


SAFETY FIRST:

- The Air Lifter is designed for moving furniture and appliances ONLY!
- For use on flat, level floors ONLY! Do not use on inclines, stairs or ramps.
- Do not ride or stand on the lifter plates or any load being lifted by the plates.
- Keep all body parts out from underneath heavy loads at all times.
- Avoid electric shock:
 - ✓ DO NOT USE in wet or damp environments.
 - ✓ The Air Lifter comes with a three prong grounded plug. Do not remove the ground pole from the plug. Use the Air Lifter with appropriate 3 prong power cords and receptacles.




CONTENTS:

- The Air Lifter comes with:
 - 2 ea. Air Plates - "E"
 - 1 ea. 2 HP Motor - "J"
 - 2 ea. Air Plate to T-Connector hose - "C"
 - 1 ea. T-Connector - "A"
 - 1 ea. T-Connector to motor hose - "B"
 - 4 ea. Plastic carpet adaptor glides - "I"
 - 2 ea. Nylon carrying bags - not shown

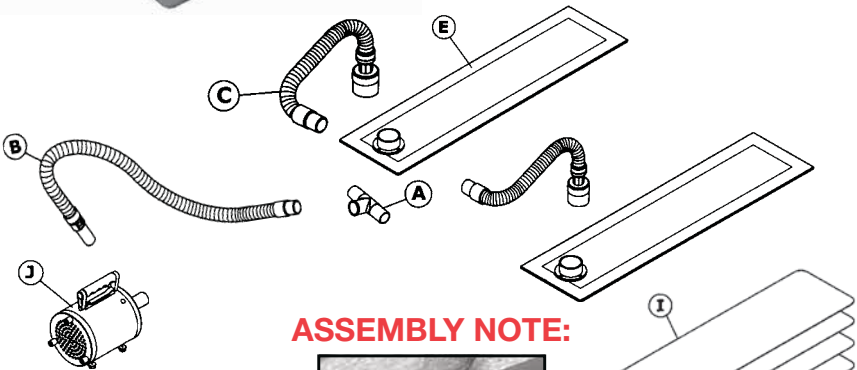

ASSEMBLY NOTE:

CAUTION: When attaching or disconnecting hoses, grab the solid plastic fitting, not the hose itself. Pulling on the hose will cause damage. NEVER pull the Air Lifter by the hoses!

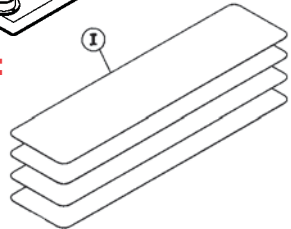

OPERATING INSTRUCTIONS

Before moving any appliance or furniture ALWAYS BEWARE OF THE FOLLOWING:

- Remove any items that may be on top of the load or inside of the appliance.
- All electrical, gas or water connections to the appliance must be shut off and removed from appliances. Check for hoses or wiring attached to the bottom of the appliance. These may not contact the air plates.
- Check the object to be moved for any delicate attachments that may contact the air plates as a result of the lifting action. For appliances, check for delicate drip pans, covers, grills or ornamentation. Remove these prior to lifting.

- When starting the blower, the load will rise. It is CRITICAL to check for adequate clearance before starting the motor. Check that there is a minimum of 3 inches clearance between the top of the load and any cabinetry or other items above the load.

If the clearance is less than 3", follow the POWER ADJUSTMENT PROCEDURE listed on page 4.



Figure 1

POSITIONING THE AIR PLATES

- The gap between the floor and the bottom of the load must be a minimum of 1/2". If the gap is insufficient, see tilting procedure (next page).
- Slide the air plates under the load, and check the gap between the top of each plate and the bottom of the load. If the gap is less than 1 3/4", the load may be lifted without any extra blocking to make up the gap. (See figure 2.)
- If the gap is greater than 1 3/4", you will need to place wood blocks on top of the plates for each corner of the load before sliding the plate under. (See figure 3.)

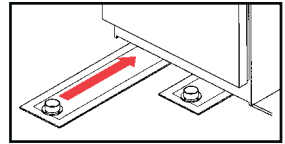


Figure 2



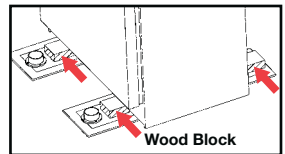


Figure 3

- When properly positioned, the air plates should be as far apart as possible, but no closer than 1" to any breakable parts of the appliance. For stability, the air plates should project out the backside of the load.
- If a plate gets stuck as you slide it under the load, try rearranging the plates in a "V" shape under the load, or entering them from the opposite side. (See below.)

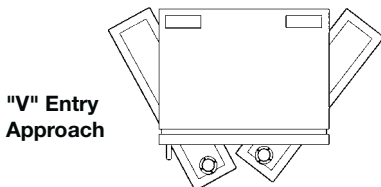

"V" Entry Approach

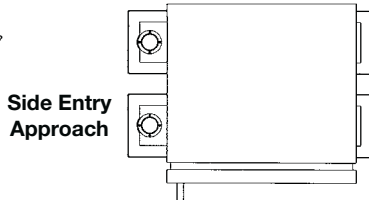

Side Entry Approach

TILTING PROCEDURE

- If the gap between the floor and the bottom of the load is less than $\frac{1}{2}$ " , check whether the load can be safely tilted back $\frac{1}{2}$ ". If so, tilt back and place a $\frac{1}{2}$ " shim under the front corners to create the $\frac{1}{2}$ " gap. (See figure 4.)
- After the load is moved, it is necessary to replace the shims under the corners, or else you will not be able to remove the air plates when the blower is turned off.

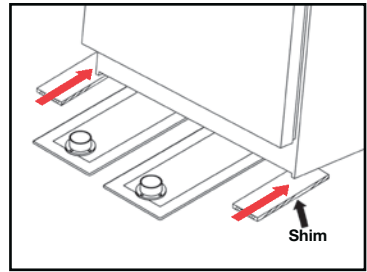


Figure 4

MOVING THE LOAD

- Insert the hose fittings into the air plate inlets and assemble the other hoses to the motor. Make sure all hose fittings are snug.
- If the clearance between the top of the load and any cabinetry or other items above is less than 3", follow the POWER ADJUSTMENT PROCEDURE below. Otherwise, proceed to the next step.
- Strap the motor over your shoulder. Make sure the on/off switch on the motor is readily accessible.
- Place one hand on the appliance and turn the blower on. The air plates will inflate quickly and forcefully. **BE PREPARED!**
- Move the appliance slowly and steadily to the desired position. **DO NOT ROCK** or push out of balance. Maintain the load in a level, controlled fashion **AT ALL TIMES**. (See figures 5 & 6.)



Figure 5



Figure 6

POWER ADJUSTMENT PROCEDURE

- This is best done with a helper. Keep an eye on available clearance at all times.
- Open the air release valve on the hose that runs from the motor to the T-Connector. This reduces the lifting action of the blower. (See figure 7.)

Switch the blower on and off in rapid succession. The air plates will partially inflate, and the load can be moved out slowly.



Figure 7

SPECIAL SITUATIONS - LEVELLING THE LOAD

- If the floating appliance is lower in the rear than the front, stepping on the front of the inflated air plates near the hose connections will force more air to the rear. It may also be necessary to step on the plates in order to position the load as closely as possible to the back wall. (See figure 8.)

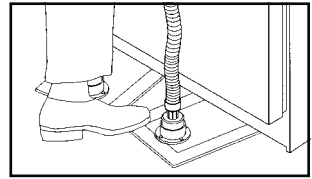


Figure 8

MOVING APPLIANCES OVER CARPET

- When moving a load over carpeted floor or any porous surface, use the plastic carpet adapters. The adapters should also be used when the floor is rough or dirty. This protects the air plates from damage.
- If you are STARTING on a floor that requires carpet adapters, slide an adapter underneath each air plate before positioning it underneath the load.

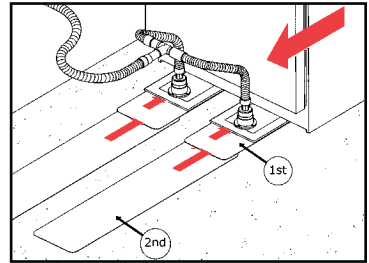


Figure 9

Next, take the two extra carpet adapters and tuck them 3-4 inches under the first pair, in the direction you want to move.

Turn on the blower and start moving the load. Once you have moved the load fully over the second pair of carpet adapters, stop and remove the first pair. This process may be repeated until you have reached the desired location. (See figure 9.)

MOVING SUB-ZERO® APPLIANCES

- Sub-Zero® Refrigerators and many other appliances may not have adequate frame supports built in to the base. In such cases, certain areas at the front and the rear edges of the cabinet itself may provide the sturdiest support for lifting.
- Remove all drip pans, grills and base covers. Determine the best points for lifting. Note especially any delicate hoses or electrical wiring. Any such hoses or wiring must be kept out from under the lifting pressure of the plates.
- Once the best points for lifting have been determined, create a custom set of wooden blocks that will support the appliance as necessary. These are to be placed on top of the air plate, and then the air plate can be slid under the appliance. (See figure 10.)

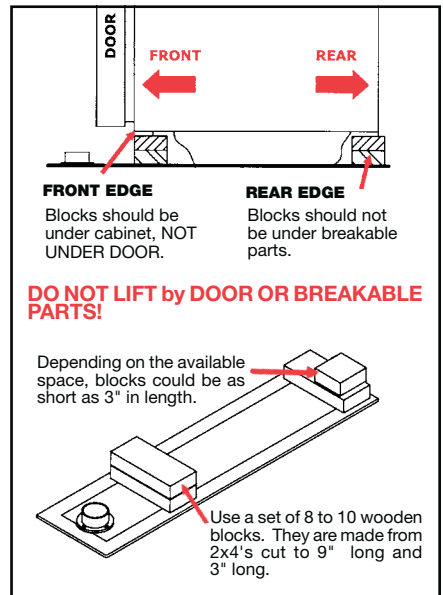


Figure 10

- In the case of a Sub-Zero® refrigerator, for the front edge of the cabinet, the best surface for lifting may be the flat area of the cabinet just behind the door. Be careful however to prevent the wooden blocks from contacting the door, or any other breakable parts, such as the base cover or drip pan supports, as this can cause major damage to the appliance. (See figure 11.)

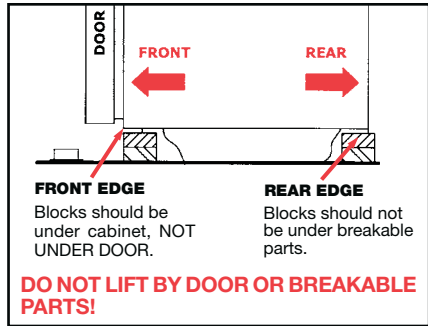


Figure 11

- At the rear edge, best surface for lifting may be at the back of the cabinet. Do not situate any blocks underneath the back side cover or drip pan supports; or any exposed hoses or wiring. (See figure 11.)
- At the rear edge, the available space may be limited. You may need to use a narrower block (no narrower than 3") on top of a wider base block (9"). (See figure 10.)

DANGER: All blocking supports used on top of the air plates must be level (at the same height relative to each other). Otherwise, as the load lifts, it will not be level, and the load may tip over.

DANGER: Sub-Zero® appliances are very heavy. Move appliances slowly and in a controlled manner at all times.

DANGER: Sub-Zero® appliances may be very top-heavy, and may fall over under certain circumstances. Move the appliance slowly, and do not move over ramps or stairs.