

WARNING: METAL DETECTOR SAFETY

Any piece of equipment can be dangerous if not operated properly. **YOU** are responsible for the safe operation of this equipment. The operator must carefully read and follow any warnings, safety signs and instructions provided with or located on the equipment. Do not remove, defeat, deface or render inoperable any of the safety devices or warnings on this equipment. **IF** any safety devices or warnings have been removed, defeated, defaced or rendered inoperable, **DO NOT USE THIS EQUIPMENT!!!**



WARNING: Plastic cases and product plastic housings made from polycarbonate or other plastics can expose you to chemicals including bisphenol A, which are known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, go to www.P65warnings.ca.gov


If the person receiving this handout will not be the user of the equipment, forward these instructions to the operator. **IF** there is any doubt as to the operation or safety of the equipment, **DO NOT USE!!! CALL A TOOL SHED IMMEDIATELY!!! FAILURE TO FOLLOW THESE INSTRUCTIONS COULD RESULT IN INJURY OR DEATH**

CAUTIONS

When searching for treasure with your Garrett detector, observe these precautions:

- *Never* trespass or hunt on private property without permission.
- National and state parks/monuments & military zones, etc. are absolutely off-limits.
- Avoid areas where pipelines or electric lines may be buried. If found, do not disturb and notify proper authorities.
- Use reasonable caution in digging any target, particularly if you are uncertain of the conditions.
- If you are unsure about using your metal detector in any area, always seek permission from the proper authorities.

ACE 300 CONTROL PANEL

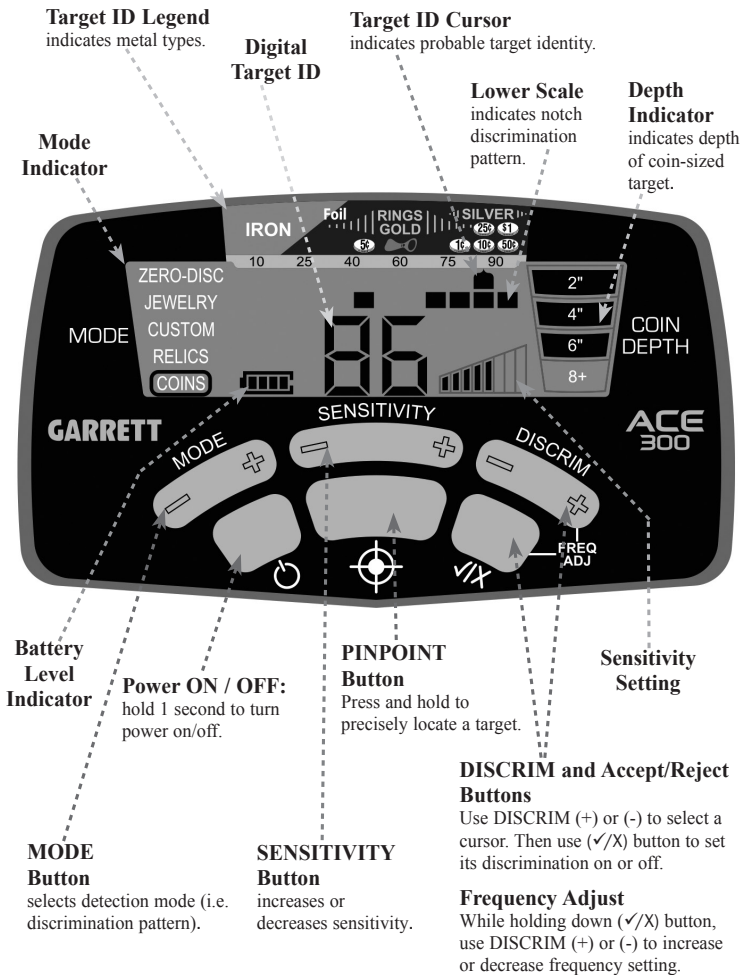

QUICK START GUIDE

1. Power ON.



Press and release the ON / OFF Power button. The ACE 300 powers on in the last mode used, automatically adjusts for ground minerals and is ready to search. The detector operates with four (4) AA batteries which are already installed by Garrett. (Factory default mode is Coins.)

2. Select Mode.




Use the Mode button to select a different detection mode, when desired.

3. Adjust settings.


Adjust Sensitivity or Discrimination settings, if desired.

4. Begin scanning.

Lower the searchcoil to approximately 1 inch above the ground and scan the coil left and right at approximately 3 ft/second. The coil must be in motion for target detection, but can remain stationary during Pinpoint.

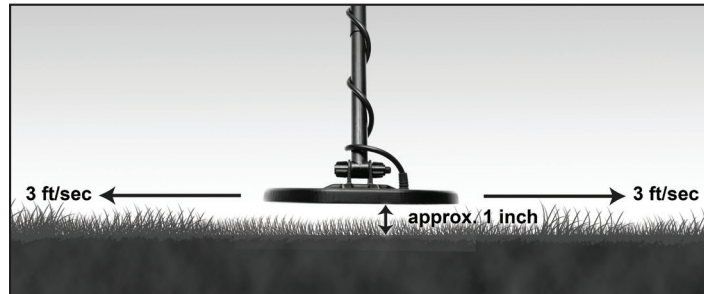

POWER ON/BASIC CONTROLS

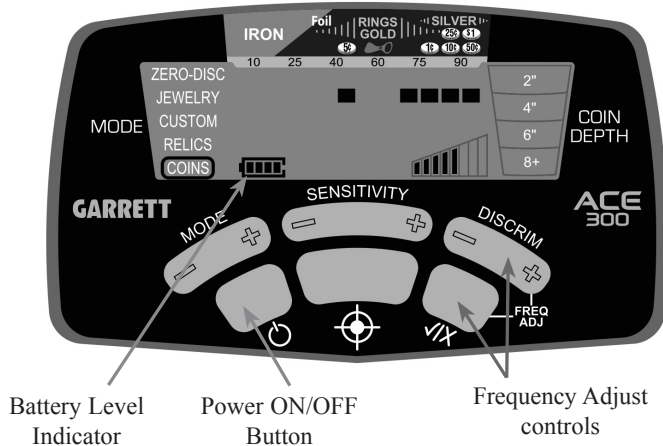


Power ON/OFF—Hold this button for 1 second to turn power ON or OFF.

Factory Reset—To restore factory settings, press and hold the power button for 5 seconds (until the detector produces a fast double beep).

Battery Level Indicator—Shows continuous status of battery life. Replace batteries when 1 segment remains.

Frequency Adjust—While holding down the (✓/×) button, use DISCRIM (+) or (-) to increase or decrease the frequency setting. Choose from four minor frequency adjustments (F1 to F4) in order to minimize interference caused by electrical sources or other metal detectors.

TARGET INFORMATION

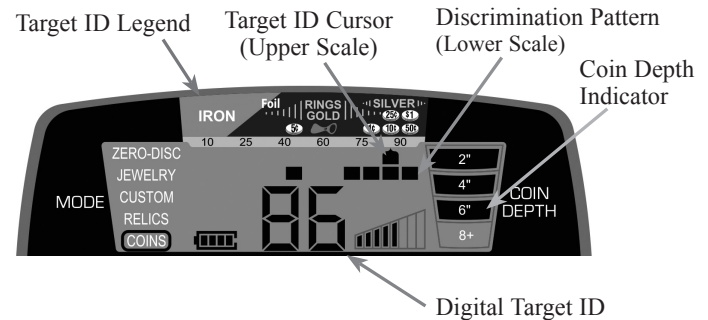

Target ID Legend—Works with the Target ID Cursor to indicate a target's probable identity, with Ferrous (iron) targets at the left, non-ferrous targets that are thin or have low conductivity in the middle, and thick or high conductivity targets (e.g. thick silver) at the right.


Lower Scale—Displays the current discrimination pattern, with lighted pixels indicating accepted targets and blank pixels indicating rejected targets.

Target ID Cursor (Upper Scale)—Will display for every target, but will produce audio only for targets accepted on the Lower Scale.

Digital Target ID—Provides a value from 0 to 99 to identify targets more precisely than the ID cursor.

Coin Depth Indicator—Shows the depth of a coin, or a similar sized target. Note: targets *larger* than a coin may display shallower than actual depth while targets *smaller* than a coin may display deeper than actual depth.

The sample chart on the following page provides Digital Target ID ranges of some commonly found items.

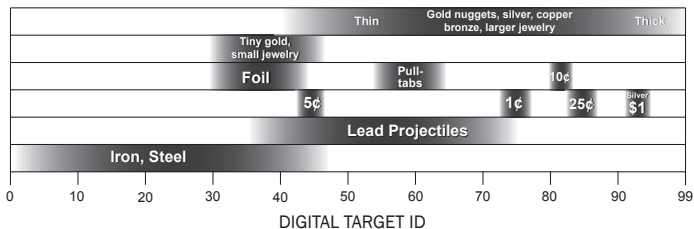

Target ID can vary widely based upon the target's size and thickness because small, thin pieces of metal cannot conduct electrical current as well as thicker pieces of metal. In addition, mineralized soils can cause Target ID errors, especially for small targets.

Tip: Target ID is most reliable when the target is centered under the searchcoil and the coil is swept flat and at a constant height above the ground.


AUDIO FEATURES

Tone ID—The ACE 300 produces three distinct tones based on a target's metal type and conductivity:

- High conductivity targets (Digital ID > 75) produce a unique belltone signal.
- Medium to low conductivity targets (Digital ID of 33–75), produce a medium-pitched signal.
- Ferrous targets (Digital ID < 33) produce a low-pitch signal.

Headphone Jack—Use any headphones with a 1/4" plug.

SELECTING MODES (Discrimination Patterns)

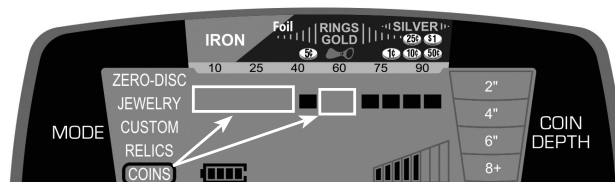

Example: this is the preset notch discrimination pattern for COINS Mode.

Choose from one of four preset discrimination patterns or use CUSTOM Mode to save a personal pattern.

Use the MODE buttons to scroll through the five modes:

- **ZERO-DISC Mode**—Detects every type of metal. All 12 discrimination pixels are switched on; no metals targets have been notched out (eliminated). Use this mode to find all metal items or when the material of the desired object is unknown. Switch to the Zero-Disc Mode to aid in locating a target when its signal is inconsistent. Such signals could mean a trash target is close to a good target.

- **JEWELRY Mode**—designed to find jewelry such as rings, bracelets, watches, and necklaces, while ignoring most iron trash.


- **CUSTOM Mode**—Can be programmed by the operator and the ACE 300 will retain the changes when the detector is switched off. The factory preset for the CUSTOM Mode is the same as the COINS Mode. Begin with this discrimination pattern and then use the DISCRIM and Accept/Reject buttons controls to customize the mode. *(For more information, see pages 11–12.)*

- **RELICS Mode**—designed to eliminate small iron pieces, while detecting good targets in the lower conductivity range, such as lead, brass and bronze.

- **COINS Mode**—designed to find U.S. and similar coins and to eliminate common trash items such as iron, foil, and pulltabs. Be aware that medium-sized jewelry may be missed with this discrimination pattern. Some digging of junk targets is to be expected, such as aluminum cans.

SENSITIVITY

Use the (+) or (-) SENSITIVITY buttons to step through the eight (8) levels. Use increased sensitivity when searching for very small or very deep targets. Use lower sensitivity levels when the detector is behaving erratically (due to excessive metallic trash, highly mineralized soils, electrical interference or the presence of other metal detectors) and the erratic operation cannot be resolved with discrimination or by changing frequency.

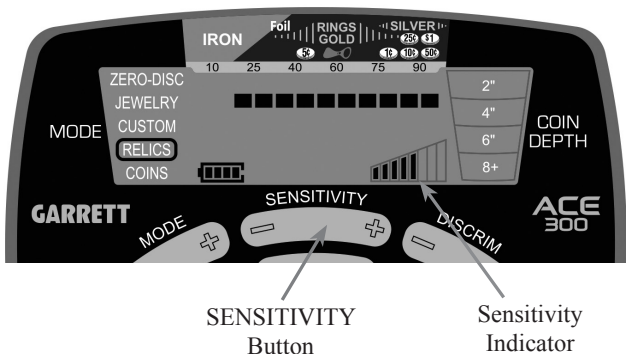

NOTCH DISCRIMINATION

Notch Discrimination—Use the DISCRIM (+) or (-) buttons in conjunction with the ELIM (✓/X) button to eliminate trash objects from detection such as foil or pull-tabs.


The ACE 300 has 12 pixels or "notches" of discrimination, shown on the lower scale. Any combination of these pixels can be switched on or off based upon your preference. There are two primary methods for modifying the Notch Discrimination Pattern to reject a specific type of trash or unwanted item.

For the first method use the (+) or (-) DISCRIM buttons to move the Target ID cursor to the left or right. Next, press the (✓/X) button to eliminate or activate the pixel located on the Lower Scale, directly below the Target ID cursor. (See *illustrations on next page.*)


The second method of modifying the Notch Discrimination pattern uses only the (✓/X) button. When an unwanted target is audibly detected, simply push the (✓/X) button to create a notch at that Target ID Cursor. The next time this item is encountered, it will not produce an audible signal.

Tip: Notch Discrimination can also be used to *find specific metal items*. For example, if an earring has been lost, scan the matching earring in ZERO-DISC mode and note its Target ID cursor. Then use the DISCRIM and (✓/X) buttons to switch off all the pixels except the one for the earring and an additional pixel on either side to account for some ID variations.

Example: Manual Modification of Notch Discrimination Pattern

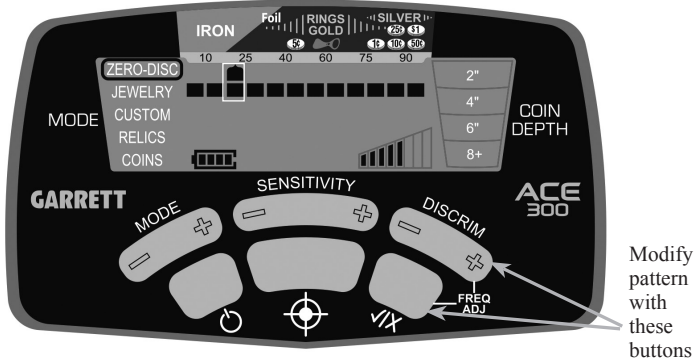

Use the NOTCH DISC buttons to position the Target ID Cursor above the pixel you wish to eliminate (see above illustration). Use the ELIM button to delete this pixel from the Lower Scale (see below). This item is now rejected.

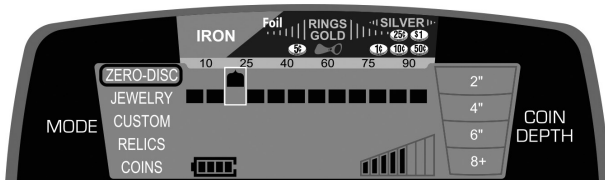

Note: Changes made to the Notch Discrimination pattern while in CUSTOM Mode will be retained when the detector is switched OFF. Changes made to all other modes will return to the factory settings when the detector is switched OFF and back ON.

IRON MASKING

To prevent an iron object from "masking" out the signal of an adjacent good target, use just enough discrimination to barely reject the iron trash (e.g. small nail, as seen in Illustration 1). This will allow you to detect the coin and nail together (see Illustration 2) and not miss/mask a good target.

Illustration 1



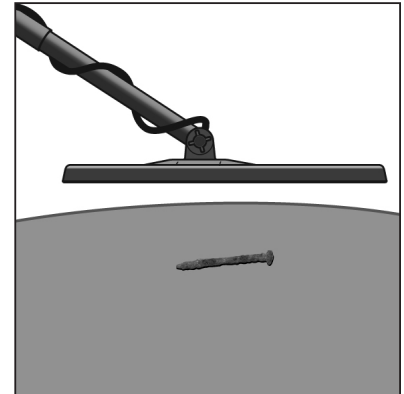


Illustration 2

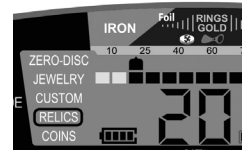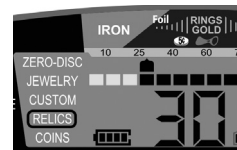

PINPOINTING


Accurate pinpointing enables fast recovery with the smallest hole possible. To use Pinpoint:

- Position the searchcoil to the side of the target's suspected location at a fixed height above the ground.
- Press and hold the Pinpoint button and slowly sweep the searchcoil over the target area while maintaining the same fixed height above the ground (e.g. 1 inch).
- Sweep the searchcoil side-to-side and front-to-back in a crosshair pattern to locate the peak signal, indicated by the loudest audio and the greatest number of segments on the Upper Scale.
- The center of the searchcoil is directly over the target with the depth of a coin-sized target shown on the depth scale. The symbol "PP" for pinpoint displays on the LCD while pinpointing.

It is recommended to practice pinpointing in a test plot.



Indicates
pinpointing
center of the
7" x 10"
searchcoil.

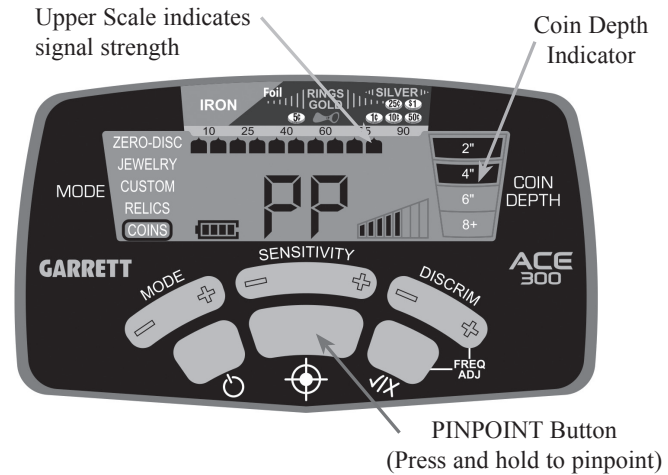


For the best pinpointing results, maintain a constant height above the ground (e.g. 1 inch).



BENCH TESTS

You should conduct bench tests to become more familiar with your detector's operation. To conduct a bench test:

1. Place the searchcoil on a flat, non-metallic surface that is several feet from other metallic objects.
2. Select the ZERO-DISC mode.
3. Pass various metal objects (coins, bottle caps, nails, etc.) across the searchcoil at a distance of 3 to 4 inches. Your metal detector will audibly and visually identify the target.
4. Perform this test in all the modes available on your detector. Observe the sounds as well as the graphics on the LCD that are made in each mode.
5. Record the results of your bench tests and refer to them when hunting in the field.


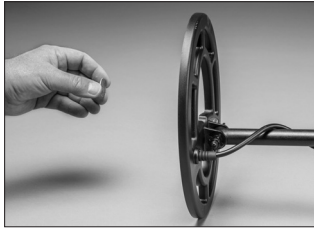


Once you have determined how your test targets register on the Target ID during bench tests, test them in the soil. Bury your targets at recorded depths to create a "test plot." Note how various targets read based upon whether they are lying in the ground flat or at various angles.

Keep accurate records or surface markers to indicate your test plot targets and their depths. Try testing these targets again in several months after the ground has settled, during periods of extreme drought or after a soaking rain. Take note of any changes in how these targets are detected.

HUNTING TIPS WITH YOUR ACE 300

- If you are new to metal detecting, start searching in areas with sandy and loose soil to make it easier to learn how to use your metal detector, pinpoint and dig targets.
- Keep your searchcoil height about 1 inch above and parallel to the ground at all times for best detection results.

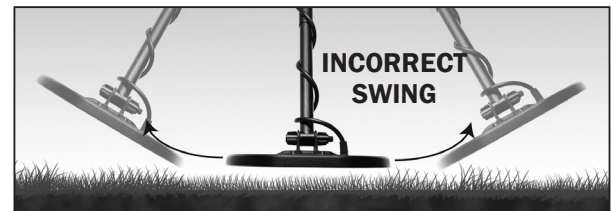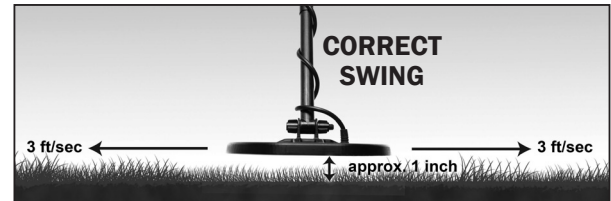

- Swing your searchcoil parallel to plow lines and the water's edge. This will minimize the negative effects caused by uneven ground in plowed fields and varying amounts of moisture near the water. Do not swing the searchcoil perpendicular to plow lines and the water's edge, as this may produce abrupt changes in ground response that can reduce the detector's performance.
- Walk slowly as you scan your searchcoil in a straight line from side to side at a speed of about 2 to 5 feet per second. Advance the searchcoil about half the length of the searchcoil at the end of each sweep.

BATTERY REPLACEMENT



Four bars indicate fully charged batteries. Replace batteries when there is only 1 bar remaining. The detector will maintain full performance until the batteries need to be replaced. NiMH rechargeable batteries may be used, but may have a shorter life per charge. You can expect 20 to 40 hours of operation depending on battery type and quality.

Replace the batteries by sliding the cover off the control housing. Remove batteries when the ACE 300 will be stored for longer than 30 days.

Note: 1.5V/cell Lithium batteries can also be used, but the use of 3.7V/cell Lithium batteries will damage the detector.



METAL DETECTING CODE OF ETHICS

The following is a Code of Ethics that many treasure hunters and clubs follow to preserve our exciting sport of metal detecting. We encourage you to do the same:

- I will respect private and public property, all historical and archaeological sites and will do no metal detecting on these lands without proper permission.
- I will keep informed on and obey all local and national legislation relating to the discovery and reporting of found treasures.
- I will aid law enforcement officials whenever possible.
- I will cause no willful damage to property of any kind, including fences, signs and buildings.
- I will always fill the holes I dig.
- I will not destroy property, buildings or the remains of deserted structures.
- I will not leave litter or other discarded junk items lying around.
- I will carry all rubbish and dug targets with me when I leave each search area.
- I will observe the Golden Rule, using good outdoor manners and conducting myself at all times in a manner which will add to the stature and public image of all people engaged in the field of metal detection.